ESM303 MOTORIZED TEST STAND W/PC CONTROL

The ESM303 is a highly configurable motorized test stands for tension and compression measurements of up to 300 lbF (1.5 kN). The ESM303 offers a travel distance of 18". It can be controlled from the front panel or via a PC. Engineered on a unique modular platform, the stand can be configured in many different ways with its generous array of standard features as well as optional features that can be activated in the field. Integrated travel indication, overload protection, and a host of programmable parameters make the ESM303 the perfect test stand for quick, simple setup and testing in laboratory and production environments.

S P E C I F I C A T I O N S

LOAD CAPACITY:

< 24 in (610 mm)/min: > 24 in (610 mm)/min: MAXIMUM TRAVEL DISTANCE: SPEED RANGE: Standard:

Optional:

Model

SPEED SETTING ACCURACY: SPEED VARIATION WITH LOAD: LIMIT SWITCH REPEATABILITY: TRAVEL ACCURACY: TRAVEL RESOLUTION: POWER: WEIGHT: 300 lbF (1.5 kN) 200 lbF (1 kN) 18 in (457 mm) 0.5 - 13 in/min

(13 - 330 mm/min) 0.02 - 45 in/min (0.5 - 1,100 mm/min) ±0.2% ±0% (Stepper motor driven) 0.001 in (0.03 mm) ±0.002 in (0.05 mm) 0.001 in (0.02 mm) 80-240 VAC, 50/60 Hz 56 lbs (25.6 kg)

ORDERING INFORMATION Description

mouol	Beccelliption	
Test Stand Options		
ESM303	Motorized test stand; 110 V	
09-1214	Interface cable, gauge / indicator to ESM303	
09-1158	USB output cable	
AC1062	Load cell / indicator mounting kit	
ESM303-001-1/-2/-3	Single column extension, 6/12/24 in.	
	(150/300/600 mm)	
ESM303-002-1/-2/-3	Double column extension, 6/12/24 in.	
	(150/300/600 mm)	
Controller Options		
AF008	FollowMe [™] force-based manual positioning	
AF009	Travel indication, with USB output	
AF010	Computer control, via USB	
AF011	Programmable travel limits	
AF012	Integrated overload protection	
AF013	Auto return	
AF014	Cycling / dwell time	
AF016	Independent up and down speeds	
AF017	Extended speed range, low	
AF018	Extended speed range, high	
AF019	Break detection	
AF020	Load holding	
AF021	Preload / sample touch	
AF022	Profiles	
AFCOMP	Complete options package (includes all Controll	
	Options, plus 09-1124 and 09-1158 cables)	

- **STANDARD FEATURES**
- SELECTABLE SPEED SETTING
- UPPER AND LOWER TRAVEL LIMIT SWITCHES
- ADJUSTABLE, REMOVAL CONTROL-LER WITH INTUITIVE MENU NAVIGATION
- PASSWORD PROTECTION OF TEST
 PARAMETERS
- STEPPER MOTOR-DRIVEN, PRODUCING SMOOTH AND QUIET OPERATION WITH NO SPEED VARIATION UNDER LOAD
- USB OUTPUT OF FORCE VS. TIME OR FORCE VS. TRAVEL
- COMPACT FOOTPRINT, SUITABLE FOR CROWDED WORKBENCHES
- ERGONOMIC DESIGN, WITH SMART, CLEAN CABLE MANAGEMENT
- INTEGRATED ELECTRONICS ASSEMBLY, EASILY REMOVED AND TRANSPORTED



Note: ESM303 contains a universal power supply (80 - 240 V) and includes a power cord with US plug. Add suffix 'E' for Euro plug, 'U' for UK plug, or 'A' for Australian plug. Ex: ESM303E

TEST STANDS

1-800-344-3921

ler


ESM303 MOTORIZED TEST STAND W/PC CONTROL

Feature	Part No.	Description	Requirements
FollowMe TM	AF008	Crosshead movement responds to manually pushing or pulling on the force gauge shaft or load cell. Increasing force produces greater speeds. Ideal for setups and quick positioning.	 Series 7 or 5 gauge or indicator with load cell 09-1214 interface cable
Travel indication	AF009	Travel is indicated on the control unit display, with output via USB. An internal scale utilizing Renishaw technology produces significantly higher accuracy than with conven- tional rotary encoderbased designs. Backlash and nonlin- earity are virtually eliminated.	 Field hardware installation required. If data output to a PC is required, add 09-1214 and 09-1158 cables, and a Series 7 or 5 gauge or indicator with load cell.
Computer control	AF010	The ESM303 may be fully controlled by a PC through a custom-written program in any language supporting ASCII communications. Also responds to the legacy Chatillon TCD command set and legacy Nexygen TCD software (not available from Mark-10).	 Series 7 or 5 gauge or indicator with load cell AF009 travel indication AF011 programmable travel set points 09-1214 interface cable 09-1158 USB output cable
Programmable travel limits	AF011	The stand stops at or cycles between programmable upper and lower travel distances.	- AF009 travel indication option
Overload protection	AF012	Protects a force gauge or force sensor against overload. Program the desired percentage of full scale of the gauge. Adjustable analog voltage setting allows the stand to inte face with virtually any gauge with analog output.	 Series 7 or 5 gauge or indicator with load cell 09-1214 interface cable
Auto return	AF013	The crosshead moves to a limit switch, force set point, travel position, or break, then stops and reverses direction at full speed to the opposite limit.	 If reversing at force set point: Series 7 or 5 gauge or indicator with load cell, and 09-1214 interface cable If reversing at travel limit: AF011 programmable travel limits option If reversing at break: AF019 break detection option and 09-1214 interface cable
Cycling / dwell times	AF014	Same as auto return, but with the ability to program up to 100,000 cycles. Programmable dwell time for upper and lower limits (set independently) can be set up for up to 10,000 seconds	- Same as auto return, at the same speed in each direction. Add AF016 for independent up and down speeds.
Independent up and down speeds	AF016	Individually configure speeds for the up and down direc- tions.	-
Low speed range extension	AF017	Extends the standard speed range down to 0.02 in/min (0.5 mm/min).	-
High speed range extension	AF018	Extends the standard speed range up to 45 in/min (1,100 mm/min).	
Break detection	AF019	Crosshead stops at a sudden drop in force. Programmable percentage of peak force.	 Series 7 or 5 gauge or indicator with load cell 09-1214 interface cable
Load holding	AF020	Dynamically adjusts the crosshead position to maintain a programmed load for an indefinite or specified period of time.	 Series 7 or 5 gauge or indicator with load cell If a specified time is required, add AF014 cycling / dwell time option 09-1214 interface cable
Preload / sample touch	AF021	Stops the crosshead and/or zeroes the travel display at an initial preload - useful in tensile, compression, spring, elongation, and other applications. Preload is program- mable as a percentage of force gauge/load cell full scale. Three modes: (1) stop, (2) stop and zero, and (3) zero without stopping.	 AF009 travel indication Series 7 or 5 gauge or indicator with load cell 09-1214 interface cable
Profiles	AF022	Save and recall sets of test parameters, such as speeds, travel limits, preloads, etc. Up to 50 profiles may be stored.	
Complete options package	AFCOMP	Includes all functions listed above, plus 09-1214 interface cable and 09-1158 USB cable. Requires a Series 7 or 5 gauge or indicator with load cell.	

1-800-344-3921

ESM303 MOTORIZED TEST STAND W/PC CONTROL

Dimensions in (mm)

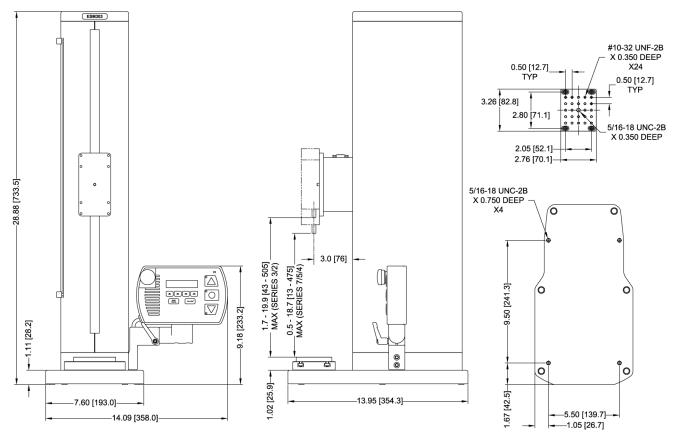

1-800-344-3921